S AND H MANUFACTURING COMPANY 316 WEST SUMMIT STREET NORMAL, ILLINOIS 61761 (309) 452-1450 FAX - (309) 454-3118 www.sherrardracks.com

ASSEMBLY INSTRUCTIONS FOR THE SHERRARD "ROLL-AWAY" CELLO, DOUBLE BASS, AND GUITAR RACKS

The Sherrard Cello, Double Bass (String), and Guitar Racks are each packaged in two separate packages. One package (Triangular shaped) contains the RACK ENDS, CASTERS, SCREWS, and WASHERS for assembling the rack. The other package (Long, Rectangular shaped) contains the LADDER and HEAD RAIL. HOLES for assembly have been PRE-BORED in the rack parts.

TO ASSEMBLE

- 1. Attach LADDER to ENDS by passing Screws with Washers through the PRE-BORED HOLES at the base of the ENDS and screwing them into the PRE-BORED HOLES at each end of the LADDER Section. UPHOLSTERY should be facing UP. Eight 3-inch SCREWS are supplied for this purpose on the DOUBLE BASS RACK. All assembly SCREWS for the CELLO AND GUITAR RACKS are 1 ¾ inches.
- 2. ATTACH the HEAD RAIL to the ENDS in the same manner using 1 3/4" screws with washers. The PRE-BORED HOLES are at the top of the ENDS. UPHOLSTERY should be facing FORWARD.
- 3. Apply CASTERS to Base of ENDS by pushing them into the SOCKETS in base of ENDS.